

Wireless Combination Pin/Pinless Moisture Meter

Detachable pin/pinless sensors transmit data to the display


And can be viewed from a remote location up to 65ft (20m) from the measurement point

Features:

- Full color graphical display
- Detachable sensors transmit data to the display that can be viewed from a remote location up to 65ft (20m) from the measurement point
- Connect to multiple sensors on individual channel
- Trending Mode with graphical representation of live reading for fast scanning of large areas
- Wireless sensor affixes to telescoping handle (4ft/1.2m) for measurements in ceilings or in hard to reach areas; Optional 9.8ft (3m) and 16.4ft (5m) handles available
- %WME (wood moisture equivalent) pin moisture reading
- Visual and audible High/Low alarm modes
- Pinless measurement depth to 0.75" (22mm) below the surface
- 2 point calibration check built into protective cap
- Cap protects pins during storage and snaps on to the side when in use
- Complete with 3.7V rechargeable Li-Polymer battery, wireless moisture sensor, external pin probe, replacement pins, telescoping handle (4ft/1.2m), AC adaptor, protective cap, 2G SD card, and hard case



Wireless sensor affixes to telescoping handle

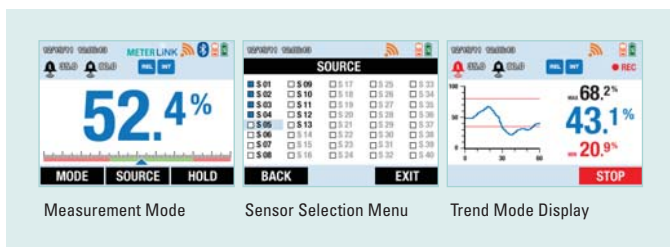

Distributore Autorizzato :
Geass S.r.l. - Torino - Tel.:
+39 011.22.91.578 – info@geass.com
web site : www.geass.com

Ordering Information:

M0270Wireless Combination Pin/Pinless Moisture Meter
M0270-XOptional Wireless Moisture Sensor
MO-P1Remote Moisture Pin Probe for M0270
EXT-1Telescoping Handle (extends to 4ft/1.2m) for M0270
EXT-3Telescoping Handle (extends to 9.8ft/3m) for M0270
EXT-5Telescoping Handle (extends to 16.4ft/5m) for M0270
M0200-PINSReplacement Pins (50 Pins)

Specifications	
Pinless Range/Depth	0 to 99.9 (relative)/ 0.75" (22mm)
Pin Range	6.0 to 99.9%
Transmission Frequency	2.4GHz (pin/pinless sensor to display)
Transmission Range	65ft (20m) unobstructed view
Dimensions	8x2.3x1.7" (203x58.4x43.2mm)
Weight	7.2oz (204g)