

OMNI 4" LT

Omnidirectional sound source





The Omni 4" LT offers a lightweight and powerful signal source for room & building acoustic measurements. Portability is an essential requirement for acoustic technicians: OMNI 4" LT represents the best compromise between weight and performance.

The new spherical sound source OMNI 4" LT printed with the innovative additive manufacturing system, is specifically designed to grant an improved sound radiation and a closer to perfection isotropy.

The Omni 4" LT is composed by a cluster of 12 speakers with neodymium magnets and only weight 4,5 Kg. The reduced diameters of 280 mm allow it to be used also in limited space conditions.

With its small diameter and lightweight, it is suitable for mobile where is required a smart and compact equipment like vehicles, aircrafts, cabins, and cockpits.

Furthermore is also perfect for sound insulation measurement in building acoustics measurement as well as for room acoustical measurement.

ACCESSORIES INCLUDED

- 6 meters connecting cable
- Soft carry bag with shoulder strap

Optional

- Trolley flight case
- Tripod with soft bag

CONFORMITY LAWS

UNI EN ISO:

140-4, 10140, 16283-1, 3382, 354;

Directivity (D) according to: 140, 16283 and 3382. Conform to CE directives.

TECHNICAL FEATURES

· Diameter: 280 mm


• Weight: 4,5 kg

• Max sound power level: 119 dB


• Maximum power: 350 + 350W

Impedance: 3+3Ω


UNI EN ISO 16283-1

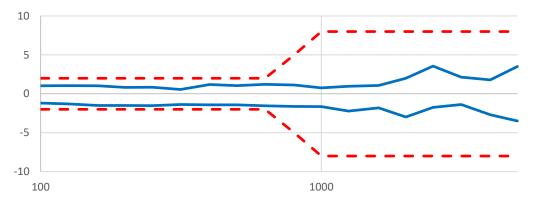


UNI EN ISO 3382

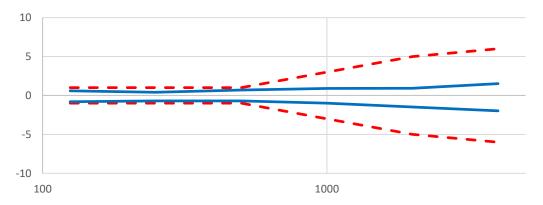



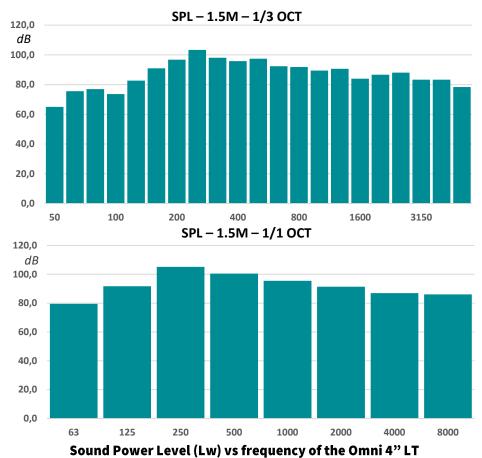

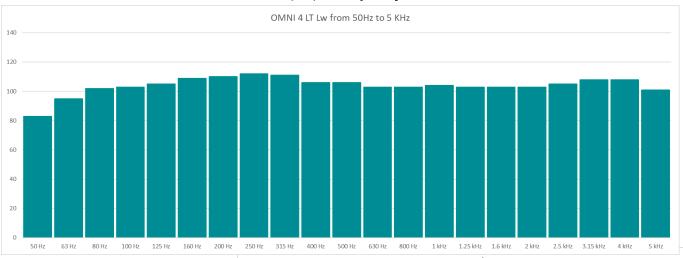

Directivity 1/1 OCT **APPLICATION AREAS** 31,5 Hz 120,0 Architectural and Building Acoustics 330 Airborne sound insulation =125 Hz -250 Hz · Room+hall acoustics 60° 40,0 Laboratory Measurement 20,0 500 Hz **-**1 KHz · Reverberation time Field Measurement 2 KHz 4 KHz Road-Railway 240 Aerospace Naval **−**8 KHz —16 KHz 150°

All information subject to change without notice



COMPANY IDENTITY

Ntek is specialized in products and services for noise and vibration measurement and control, in all applicable acoustic fields. The company has been able to improve in designing, developing and producing solutions that mix simplicity, portability and user-friendly products with excellent quality.

Ntek main goal is to supply a qualified service with a complete range of products delivered on time in order to guarantee its customers the chance to focus on their business.

To keep this promise we have strongly invested in innovation and production process with monitoring procedures certified by independent primary authority.

OUR VISION

We believe that acoustics is the basis of wellness and improvement of life quality. It's for this reason that we develop, innovate and produce equipment inspired to this philosophy.

HOW WE WORK

Ntek can ensure a high level of service, thanks to modern processes and new laboratories, completely equipped for different operations of design, production, measurement, check and control.

INTERNAL LOGISTICS AND STOCK

With its new operative location of 500 m2 and its internal stock, Ntek guarantees available products in ashort time according to customers' needs. Todaywe can handle an order in 48 hours compared with a standard delivery of 45/60 days.

The new location is structured to be flexible with logistics activities and in answering efficiently to productive needs of our customers.

SUSTAINABILITY

Green company, environmentally friendly, aimed to a continuous improvement of quality and safety in industrial processes.

