

# OMNI 5" 3D

Omnidirectional sound source



The OMNI 5" 3D sound source has been designed for continuous operation for different hours at full power. Lightweight, compact and robust, the source provides uniform sound radiation.

The 3D version is the evolution of the best-seller OMNI 5" traditional version with a lighter solution due to the additive manufacturing process.

The OMNI 5" 3D is composed by 12 high-quality speakers properly designed for the building acoustic applications. The Omni 5" 3D is powered by the lightweight and portable AMG Mini power amplifier, which includes a pink and white noise generator with an equalized output signal.

When used with the power amplifier AMG Mini, the high sound power level ensures accurate measurements also in case of high insulation partitions and in large rooms.

**ACCESSORIES INCLUDED**

- 6 meters connecting cable
- Soft carry bag with shoulder strap

**Optional**

- Trolley flight case
- Tripod with soft bag

**CONFORMITY LAWS**

UNI EN ISO:

140-4, 10140, 16283-1, 3382, 354;


Directivity (D) according to: 140, 16283 and 3382.

Conform to CE directives.


**TECHNICAL FEATURES**



- Diameter: 340 mm
- Weight: 11 kg
- Max sound power level: 124 dB
- Maximum power: 350 + 350W
- Impedance: 3 + 3Ω

**UNI EN ISO 16283-1**

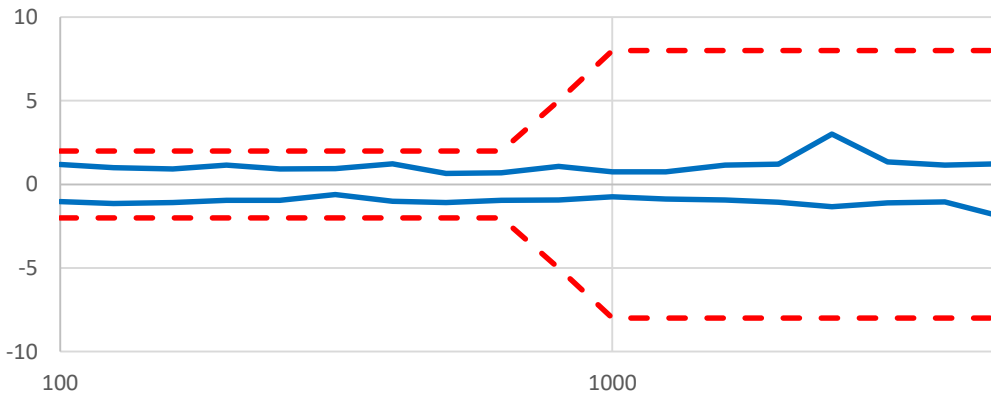


**UNI EN ISO 3382**

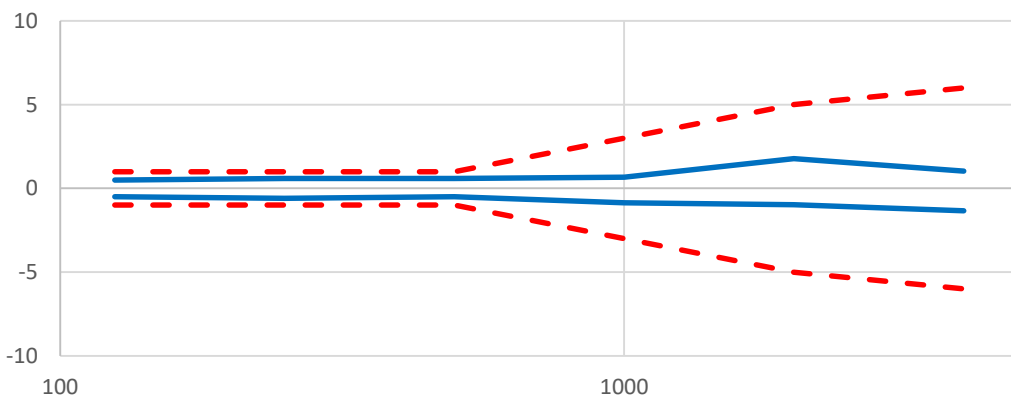

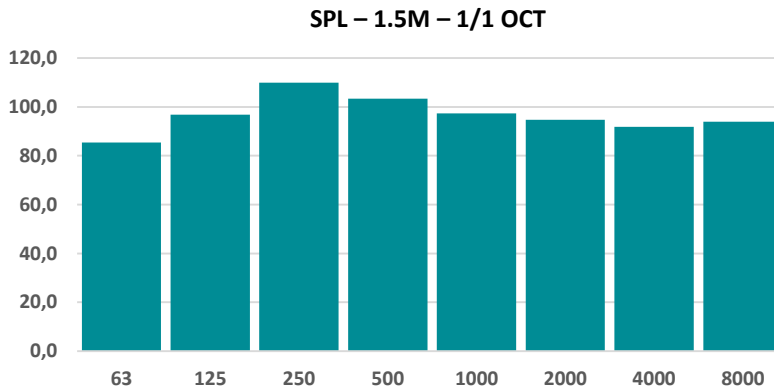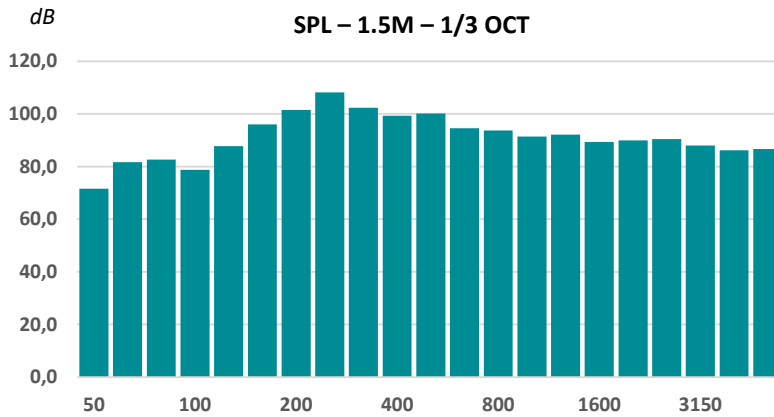


**Sound Power Level (Lw) vs frequency of the Omni 5”**

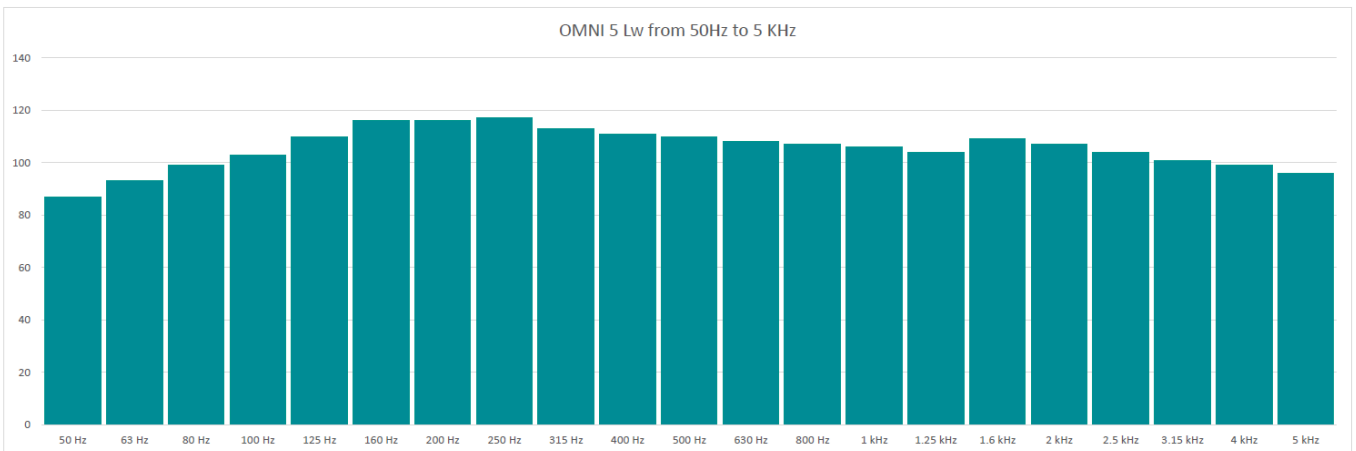

**APPLICATION AREAS**

- Architectural and Building Acoustics
- Airborne sound insulation
- Room+hall acoustics
- Laboratory measurements
- Reverberation time
- Field Measurement
- Automotive
- Aerospace
- Naval

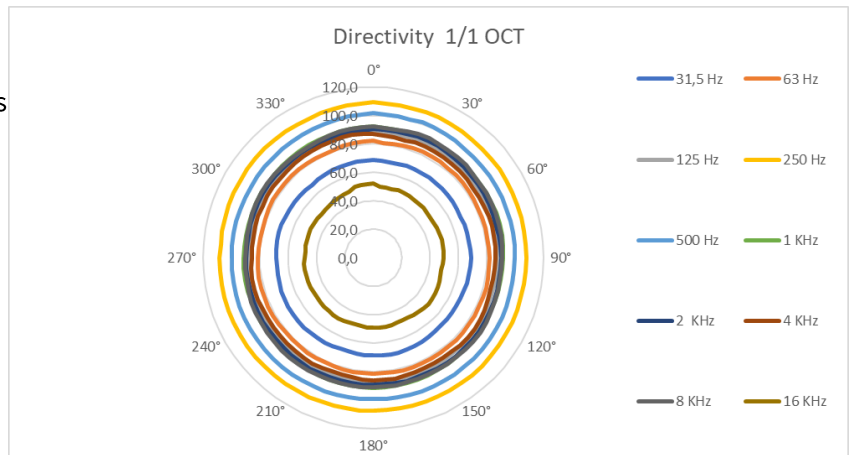

## COMPANY IDENTITY

Ntek is specialized in products and services for noise and vibration measurement and control, in all applicable acoustic fields. The company has been able to improve in designing, developing and producing solutions that mix simplicity, portability and user-friendly products with excellent quality.

Ntek main goal is to supply a qualified service with a complete range of products delivered on time in order to guarantee its customers the chance to focus on their business.

To keep this promise we have strongly invested in innovation and production process with monitoring procedures certified by independent primary authority.

## OUR VISION

We believe that acoustics is the basis of wellness and improvement of life quality. It's for this reason that we develop, innovate and produce equipment inspired to this philosophy.

## HOW WE WORK

Ntek can ensure a high level of service, thanks to modern processes and new laboratories, completely equipped for different operations of design, production, measurement, check and control.

## INTERNAL LOGISTICS AND STOCK

With its new operative location of 500 m2 and its internal stock, Ntek guarantees available products in a short time according to customers' needs. Today we can handle an order in 48 hours compared with a standard delivery of 45/60 days.

The new location is structured to be flexible with logistics activities and in answering efficiently to productive needs of our customers.

## SUSTAINABILITY

Green company, environmentally friendly, aimed to a continuous improvement of quality and safety in industrial processes.

A close-up, low-angle shot of a large, black, dome-shaped speaker grille. The grille has a fine, perforated mesh pattern. At the top, a small, rounded, metallic-looking knob or cap is visible. The background is a solid teal color.

### Ntek S.r.l.

Via Gabrielli 18

10077 San Maurizio Canavese (TO)

ITALY

[www.ntek.it](http://www.ntek.it)

[info@ntek.it](mailto:info@ntek.it)

+39 011 4053600

